

# ***PULLMAN-HOLT***

## ***Operation & Care Instructions***

---

### **AirWave Fan**

The AirWave is designed to operate at two speeds and two directional (horizontal and vertical) positions.



### **AirWave Fan Unpacking**

Remove the AirWave Fan from its original carton. Visually inspect for any signs of damage during transit. If there are any signs of damage, do not operate the unit. Contact Pullman-Holt customer service and do not discard the original packing materials since they may be required to transport the unit back to the factory.

#### **WARNING**

**READ AND UNDERSTAND ALL WARNINGS AND INSTRUCTIONS BEFORE USING THIS PRODUCT.**

### **Instructions**

1. Do not use this fan near flammable materials, or vapors.
2. Do not expose this fan to water or rain, store indoors.
3. Never immerse, or wash the fan with water.
4. To unplug the cord, grasp the plug and pull.
5. Do not block openings of fan, or allow dust to accumulate on them.

6. Do not drop the fan.
7. To reduce the risk of electric shock, use only with an extension cord type S, SO, ST, STO, SJ, SJT, SJO, or SJTO.
8. Make sure your extension cord is in good condition and be sure to use one heavy enough to carry the current your product will draw. An undersized extension cord will cause a drop in line voltage resulting in loss of power and overheating. If in doubt, use the next heavier gauge. The smaller the gauge number, the heavier the cord. Use no smaller than a # 16 awg extension cord.
9. Do not connect more than four (4) AirWave fans in series.

### **Replacement Parts**

B260872	Cord Set
B260873	Switch
B260874	Motor
B260875	Fan
B260876	Circuit Breaker
B260877	Wheels And Handle

---

### **Pullman-Holt Corporation**

10702 N 46th Street • Tampa, FL 33617  
(813)971-2223 • fax (813) 971-6090  
[www.Pullman-Holt.com](http://www.Pullman-Holt.com)